


10 TIPS FOR EFFECTIVE RADON PREVENTION

EUROPEAN RADON DAY
7TH NOVEMBER 2019



1

ALWAYS CHECK WHETHER RADON PROTECTIVE MEASURES ARE REQUIRED OR RECOMMENDED PRIOR TO STARTING A PROJECT

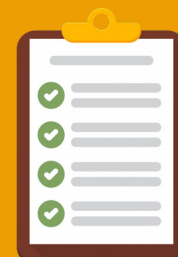

2

CHOOSE A MATERIAL THAT IS EFFECTIVE FOR RADON PROTECTION

3

ENSURE THE WHOLE FOOTPRINT OF THE BUILDING IS PROTECTED

4

DOUBLE CHECK ALL JOINTS AND SEALS

5

CONSIDER THE EFFECTS OF ENERGY SAVING DESIGN

6

USE A PROFESSIONAL TO DESIGN & INSTALL RADON PROTECTION



7

ENSURE THAT THE SYSTEM IS NOT DAMAGED AFTER INSTALLATION

8

IF NECESSARY, ACTIVATE SUB SLAB DEPRESSURISATION SYSTEMS

9

UPON COMPLETION, CARRY OUT A RADON TEST IN THE BUILDING



10

INFORM THE BUILDING OWNER OF THE RADON PROTECTIVE MEASURES THAT HAVE BEEN INSTALLED



Visit www.radoneurope.org to see what is happening in your country